

Manual FalseStart



SPORT TIMING SYSTEMS

Version: 2012v1



TimeTronics NV
Lammerdries-Oost 23B
B-2250 Olen, Belgium

www.timetronics.be - info@timetronics.be

Table of Contents

PREFACE.....	2
1. Introduction.....	3
1.1 Optimization of the audibility of the starting shot.....	3
2. BUILDING THE SETUP.....	4
2.1 Contents.....	4
2.2 Attachment of the starting modules onto the starting blocks.....	4
2.3 Connection of the cable(s).....	4
2.4 Connections of the front and rear panel of the FalseStart box.....	5
2.4.1 Front panel.....	5
2.4.2 Rear panel.....	5
3. OPERATION.....	6
3.1 Basic principle.....	6
3.2 Status screen.....	6
3.2.1 Adjusting the sound volume.....	6
3.3 The menus.....	7
3.3.1 Test blocks.....	7
3.3.2 St.(art) training.....	8
3.3.3 Status disp(ay).....	9
3.3.4 Race result.....	9
3.3.5 Race name.....	9
3.3.6 Start Offic(ial).....	9
3.3.7 Print react(ion times).....	10
3.3.8 Print delay.....	10
3.3.9 Pr(inter). on/off.....	10
3.3.10 Sound preferences.....	11
3.3.11 Displ(ay) light.....	11
3.3.12 Meas(uring). Pref(erences).....	11
3.3.13 Prog(ram) names.....	12
3.3.14 Total reset.....	12
3.4 The start.....	12
3.5 The print-out.....	12
3.6 The printer.....	13
3.6.1 Replacing paper.....	13
3.7 Automatic shutdown.....	13



PREFACE

Welcome to the "FalseStart II" user manual.

May we recommend you to gently leaf through the entire manual first, just to have an initial idea of how the book is structured. As we cannot possibly explain all details simultaneously, this might help you a bit in understanding and tracing things back. Of course, the table of contents will also help you in doing so.

Please note that all pictures are examples, the delivered version can be different than shown in this manual please inform yourself before purchase.

If you, after reading this document, have any further question regarding the operation or service of this or any other TimeTronics equipment, please contact your local distributor or TimeTronics directly, by email: info@timetronics.be, or call us at +32 (0) 14 23 19 11

Please also contact us if you have any remarks or advise regarding this user manual: info@timetronics.be.

Good luck with FalseStart II and thank you for your confidence in the TimeTronics products and services.

The editors.

© Copyright 2012 TimeTronics. All rights reserved.

TimeTronics

Lammerdries 23b

B-2250 Olen

Belgium

Tel.: +32 (0) 14 23 19 11

Disclaimer

Under no circumstances shall TimeTronics be liable for any loss, damage or expense suffered or incurred with respect to any defective product. In no event shall TimeTronics be liable for any incidental or consequential damages that you may suffer directly or indirectly from use of any product. Windows, Windows XP and Windows VISTA are registered trademarks of Microsoft Corporation.

1. Introduction

In T&F races the athletes have become faster and faster and the result of one athlete meticulously approximates to the result of another. This progress goes hand in hand with the evolution in science and technique. As a consequence, time measurement in track and field races should be very accurately performed up to one thousandth of a second.

A very significant part of a race (particularly at sprint races) is the start. Sometimes, a detection of such a start is still visually perceived by the human eye. The development of our system, False Start, enables us to electronically detect a false start.


An athlete causes a FalseStart whenever he or she starts before 100 thousandths of a second after the starting shot (= current IAAF regulation). The IAAF considers this limit of 100 thousandths as being the fastest human reaction time possible. This means that a starter in the current system has to judge whether an athlete starts sooner or later than the 100 thousandths of a second, thus causing a FalseStart or not. An athlete can be privileged (e.g. letting him run at a start after 65 thousandths) or handicapped (e.g. shooting back at a start after 105 thousandths). By applying an electronic detection, these inaccuracies can be avoided.

1.1 Optimization of the audibility of the starting shot

It is possible that:

- a) The sound of the starting shot does not reach all athletes simultaneously.
- b) The sound of the starting shot reaches the athletes too late.

At a start of 8 athletes, where all starting blocks are positioned next to each other, the distance between the athlete in lane 1 and the one in lane 8 amounts to approximately 8.5 meters. When looking at the time difference with respect to the moment at which both athletes hear the starting shot, and taking into account the sonic speed (= 343 m/s), we can conclude that the athlete in lane 8 hears the starting shot 2.5 hundredths of a second later than the athlete in lane 1 provided that the starter is positioned at the far left side from the track (see drawing).

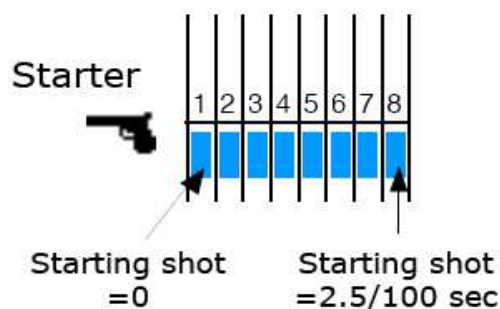


This difference may even become larger at races such as the 400 meters, at which the starting blocks are positioned at least 7.5 meters from each other. The athlete in lane 8 would hear the starting shot 14.4 hundredths later than the athlete in lane 1, on condition of course that the starter would take place close to the athlete in lane 1, which would rather be unfair.

The starter could in fact position himself at an equal distance to each athlete, in other words in the centre of an imaginary circle which is drawn over the starting blocks. Consequently he will be about 31 meters apart from each athlete so that all athletes will simultaneously hear the starting shot 9 hundredths of a second too late.

That is why this virtual distance between starter and athlete will have to be reduced. We bring the sound to each athlete by using a microphone and an amplifier at the central starter position, and a loudspeaker into EACH starting modules (mounted at the back of each starting block). All connections are made by means of **one** single cable, which connects all starting modules to the FalseStart system.

What we certainly want to emphasize is that the FalseStart detection system remains an auxiliary **TOOL** for the starter, to **ASSIST** him. It still remains the starter's responsibility to make the final decision when it comes to defining a false start.

In subsequent parts you will encounter a more elaborate description of our FalseStart detection system.

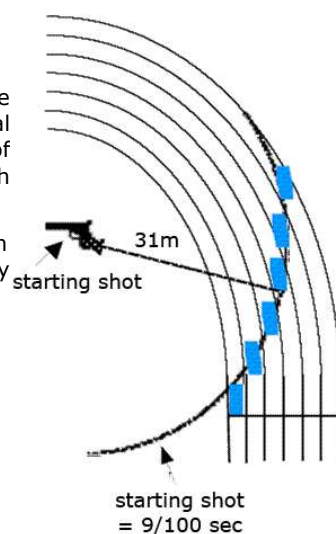

2. BUILDING THE SETUP


2.1 Contents

The FalseStart II configurations (two versions; 8 or 10 lanes) are packed in a wooden case, and contain:

- 1 metal enforced wooden carrying case containing:
 - 8 (or 10) starting modules (with built-in sensors, electronics, and loudspeaker)
 - 2 'dummy' starting module connectors
- 1 synthetic carrying case containing:
 - 1 start detector to be mounted on starting pistol (with 3m cable)
 - 1 start button (with 3m cable)
 - 1 short FScable for 100m: 8 (or 10) lanes
 - 1 headset with built-in microphone + headset extension cable
 - 1 user manual
 - 3 Spare paper roll
 - Battery charger (110VAC...220VAC->12VDC)
 - 1 T-shirt "TimeTronics"
- 1 medium FScable for 200m, on reel : 8 (or 10) lanes
- 1 long FScable for 400 m or 4x400m, on reel: 8 (or 10) lanes
- 1 caddy = case on wheels containing:
 - 2 built-in batteries (each 12 Vdc, 7 Ah)
 - 1 built-in electronic FalseStart box (with built-in printer and sound amplifier)
 - 2 built-in cables on reel for connection ; a) to starting blocks, b) to MacFinish photofinish

2.2 Attachment of the starting modules onto the starting blocks

All starting modules, as delivered in a carrying case, are equipped with velcro straps on their bottom plates. Simply tear off the loop part of those velcro straps and stick it onto the starting block. The hook part of the velcro straps remains attached underneath the starting module. Now you can easily stick the starting module onto the loop velcro on the starting block. After the races, you can again pull the starting modules off the blocks and store them in the carrying case until next event.

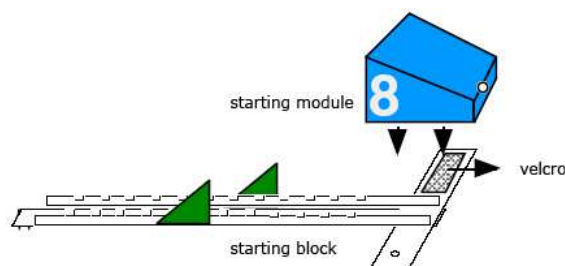


2.3 Connection of the cable(s)

Depending on the type of race, you should connect the starting modules to each other by means of either the cable for 100m, 200m or (4x) 400m. The three cables are of a different length and also the distance in between their branch points varies. The number, which is mentioned on the branch points of the cable, should correspond to the lane number (and thus the number on the starting module).

Note:

All starting modules **MUST** be connected. If not, the circuit (of all loudspeakers connected in series) will be open and **no sound signal will be heard**. In case you do not want to use all starting modules delivered (for example you have a track with 6 lanes instead of 8), you should plug 'dummy' connectors into the 'open' connectors on the cable. That way, the circuit remains closed, which is necessary!

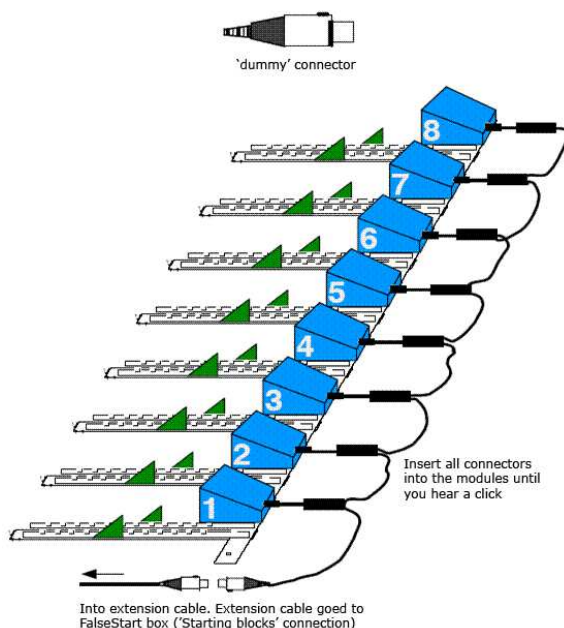


2.4 Connections of the front and rear panel of the FalseStart box

2.4.1 Front panel

At the front panel of the FalseStart box, there are in fact only two connections: the 'headset' connection in which the headset (or the extension cable of the headset) is plugged and the 'Starting Pistol' connection in which the cable of the start detector is plugged. The start detector is a small blue aluminum box, containing the built-in start sensor, and a LED light to signal the starter the ready-or-not status of the FalseStart system. The start detector itself should be mounted on the pistol's barrel as such that the distance to the pistol's cylinder amounts to maximum 10cm.

Further on the front panel you will find a printer, a display unit and other operating buttons, the function of which will be explained later on in this manual.

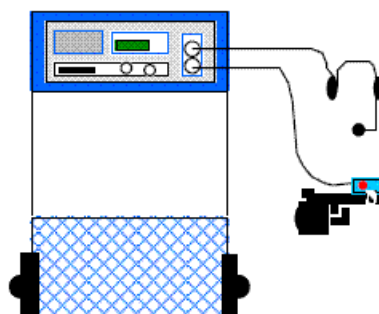

2.4.2 Rear panel



There are 5 connections on the rear panel.

1. Battery 12V DC Connection

In this connection, a connector coming from the battery is permanently plugged. On the front of the caddy you can see a connector to charge the battery.

2. Serial RS232 Connection

This is a connection that you can use in case you want to connect a personal computer to the system, to read the power curves of all athletes, and display them in a graphical waveform. Only used by specialists.

3. Speaker Connection

Used to connect **AN EXTRA, (OPTIONAL)** loudspeaker set. For example at the start of a 1500 meters race, the starter is not going to make use of the starting modules with built-in loudspeakers. In order to bring the sound of his voice and the starting pistol directly to the athletes, he can use a separate loudspeaker that can be plugged in this connection.

4. MacFinish Connection

This connection is used when connecting the system to the MacFinish photo finish and timing system. You will find the same connection on the front of the caddy.

5. Starting Blocks Connection

The extension cable to the starting blocks is plugged in here, which leads to the various cables connecting the starting modules (see page 5). You will find the same connection on the front of the caddy.

starting blocks



extension cable



to starting modules

3. OPERATION

3.1 Basic principle

Push the 'POWER' button to start up the FalseStart box. Before the start of each race, do not forget to push the 'READY' button. Then fire the starting pistol. After operation, again push the 'POWER' button to switch off the system.

OPTIONALLY, there are 14 menus in the FalseStart program helping you to create and alter program settings, printer settings, select race and starter names, etc (for detailed explanation see 3.3).

3.2 Status screen

When you start up the FalseStart box for the first time, you will enter the status screen (on your display). This is how the status screen looks like:

```
Nr:1    Batt. =11,9V
Ra: 60m Pistol=Conn.
Ht:1    MF sys=WAIT
OFFIC.1 FS sys=READY
```

As you can see, there are 8 parameters giving the starter more race-dependent information.

1. Nr : Number of starts that have been given since total reset.
2. Ra : Name of the race.
3. Ht : Heat number.
4. OFFIC. : Reflects the name of the starter. Thus 'Offic.1' can be modified to e.g. 'JOHN'.
5. Batt. : Indicates the battery voltage. Recharge your battery when voltage drops below 11,5 Volt.
6. Pistol : When the start detector is plugged in the 'Starting Pistol' connection on the front panel, Conn.(ected) will appear on the display. When not connected, the word 'Loose' appears.
7. MF sys : WAIT or READY: Only important when the FalseStart system is connected to a MacFinish photo finish system. In that case, the starter is only entitled to give a starting shot when the MacFinish system is READY. Then, the red LED (light) on the start detector will be illuminated as well.
8. FS sys : READY status appears after having pressed the 'READY' button on the FS-box.

NOTE :

```
Nr:1    Batt. =11,9V
Ra: 60m Pistol=Conn.
Ht:1    MF sys=WAIT
OFFIC.1 FS sys=READY
```

This little black dot blinks whenever the system detects a vocal sound through the starter's microphone

3.2.1 Adjusting the sound volume

When in the status screen, you can adjust the speaker's sound volume by pressing one of the tiny arrows on the front panel:



When pressing the upper arrow, the speaker's sound volume will be increased. When pressing the lower arrow, the sound volume will be decreased.

On your display: the following window may thus appear indicating the percentage of the sound volume:

```
Microphone
Volume
Control    =020%
```

 
After a number of seconds, this window closes down automatically.

3.3 The menus

- To enter the menu selection window, press the 'ENTER' button when being in the Status Screen:



- You are now in the menu selection window:



- There are 14 menus to choose from. You can indicate the menu that you want to select by scrolling up or down the list, pressing the directional arrows on the front panel.



To enter the indicated menu (indicated by the ">>" arrows), press the 'ENTER' button on the front panel of the FalseStart box.

- Let us now have a closer look at each of the menus.

SURVEY of MENUS:

1. Test Blocks
2. Start Training
3. Status Display
4. Race Result
5. Race Name
6. Start Official
7. Print Reaction Times
8. Print Delay
9. Printer on/off
10. Sound Preferences
11. Display Light
12. Measuring Preferences
13. Program Names
14. Total Reset

3.3.1 Test blocks

Obviously before the start of an event, we want to test and check our starting modules and cables. Make sure that you have connected ALL starting modules to each other in a closed circuit (see schematic drawing on page 5)! To start checking this closed circuit, we need this 'Test Blocks' menu.

- When having pressed the 'ENTER' button, subsequent window appears on your display:
- Now we can start testing our starting modules as follows:
Go to starting module #1 and give it a gentle kick. You will hear one single beep. At the same time, number '1' appears on your display:

TESTING BLOCK NR:

TESTING BLOCK NR:1

Proceed with starting module #2. Again give it a kick. Now you will hear 2 beeps (plus indication of number 2 on display), meaning that the amount of beeps MUST correspond with the number as indicated on the starting module (= lane number). In other words:

- starting module #1 > 1 beep
- starting module #2 > 2 beeps
- starting module #3 > 3 beeps
- starting module #4 > 4 beeps
- starting module #5 > 5 beeps
- etc.

IMPORTANT CONTROL:

If there are no beeps at all, please check all connections. Should you have forgotten to connect one single starting module, there won't be beeps, meaning that you are not allowed to start working with the system!! Please insert your connectors correctly (you must hear a click when plugging in the connectors into the starting modules).


To leave the menu, press the 'ENTER' button to return to the menu selection window or 'READY' to return to the Status Screen.

3.3.2 St.(art) training

The FalseStart Detection System can also be used to measure the reaction time of up to 10 athletes during training.

With this function, you do not need a 'starter' (your coach or another volunteer) to press the pushbutton to give the start. The start will be given automatically and it will use a RANDOM time between the 'ready' signal and the start.

The scheme below will give you an idea of how it works.

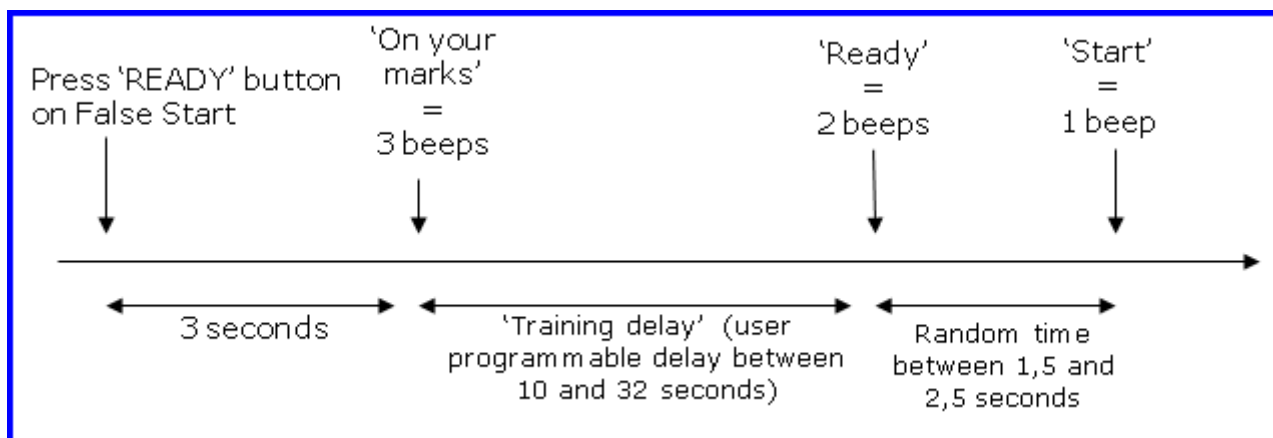

How to operate the 'Start Training' function?

- Select the menu 'St. Training' in the menu selection window by using the arrows and press 'ENTER'.
- You now enter the following display window:

```

Please >>St.Training
Select  Status Disp
Function Race Result
        Race name
  
```

```

Training PREFERENCES
Training=OFF
  
```

- Press one of the arrows to switch to 'Training ON'.

```

Training PREFERENCES
Training=ON
  
```

Note: when shutting down the FalseStart System, the 'Training' function will automatically be switched to 'Training OFF'. This is done deliberately to avoid confusion (for the official) when using the FalseStart System for competition again.

- After pressing the 'ENTER' button, a 'Training delay' setting is showed on the display window:

```

Training PREFERENCES
Training=OFF
Training delay=010
  
```

- The 'Training delay' can be set between 10 and 32 seconds. The 'Training delay' is the time between the 'on your marks' signal (represented by 3 beeps) and the 'ready' signal (represented by 2 beeps).

```

Nr:2    Batt.=12,4V
AUTOMATIC START
MODE FOR TRAINING
FS sys=WAIT
  
```

- You can change the 'Training delay' by means of the up and down arrows. Press the 'ENTER' button to save the settings: Press the 'READY' button to start the training function.

```

Nr:2    Batt.=12,4V
AUTOMATIC START
MODE FOR TRAINING
FS sys=READY
  
```

- A possible result:

Lane	Signal	Time
2	FALSE	244 0,089
4	OK	244 0,218
8	OK	244 0,250

Indication of lane numbers

False start or not

Indication of relative force on the blocks. Magnitude of acceleration

Reaction times of the athletes

- To start a new training, press the 'READY' button. Press the 'ENTER' button to go back to the menu selection window.

3.3.3 Status disp(lay)

When selecting this menu you return to the Status Screen as already explained on paragraph 3.2.

3.3.4 Race result

The 'Race Result' menu displays the start results of the previous race. Only the three fastest reaction times will appear on the display (no room enough to display all lanes). This means that the athlete causing the FalseStart will definitely be on display. If you want to view all start results, you will have to make a print-out on paper (see later). A possible example:

Lane	Signal	Time
2	FALSE	244 0,089
4	OK	244 0,218
8	OK	244 0,250

Indication of lane numbers




False start or not

Indication of relative force on the blocks. Magnitude of acceleration

Reaction times of the athletes

3.3.5 Race name

- Scroll to the race name that you want to select via the directional arrows and press the 'ENTER' button.
- Suppose we selected the 100m race. After having pressed the 'ENTER' button, the Status Screen will automatically appear and you will notice that the name of the race will have changed to '100m' and the heat number will be reset to '1':

Please >>100m
Select 200m
Race 400m
60H

Nr:1	Batt. =11,9V
Ra:100m	Pistol=Conn.
Ht:1	MF sys=WAIT
OFFIC.1	FS sys=READY

3.3.6 Start Offic(ial)

- In this menu, you choose the starter(s) or name(s) of the starter(s) that is (are) going to operate the system. You can choose from a list of 10 names.
- Just indicate the name of the starter through the up and down arrows and press the 'ENTER' button. In the 'Status Screen', the selected name will be listed. How to enter names will be described under the 'Program Names' menu (chapter 3.3.13).

Please >>OFFIC.1
Select OFFIC.2
Starter OFFIC.3
OFFIC.4

Nr:1	Batt. =11,9V
Ra:100m	Pistol=Conn.
Ht:1	MF sys=WAIT
JOHN	FS sys=READY

3.3.7 Print react(ion times)

- When selecting 'Print React' in your menu selection window (and pressing the 'ENTER' button),
- you now enter the following display window:
- Here you can also choose the race of which you would like to print the reaction times. For that, scroll with your arrows to make a selection.
- To print out all reaction times on paper via the built-in printer, press the 'ENTER' button.
- To cancel, press the 'READY' button. This will take you back to the 'Status Screen'.

```
Please >>Print React
Select   Print Delay
Function Pr. on/off
          Sound Pref.
```

```
PRINT REPORT
Reaction times
of Athletes
# races=1
```

3.3.8 Print delay

- With this menu you can print out the delay (=waiting) time of the starter. The delay time is the period between the last vocal sound of the starter through the microphone (normally the "Ready" command) and the starting shot.
- First use the arrow buttons to choose the number of races to print, and press 'ENTER' to start printing or 'READY' to cancel the printing. A possible example of what you may see on the paper print-out. In this example, the starter waited for 1.56 seconds in between his last vocal sound and the starting shot.
- A list covering all starts (including the name of the starters) can thus be printed on the right side you can find an example:

```
PRINT REPORT
Delay Time of
Starter
# races=1
```

```
Race Ht Offic.FS Delay
-----
60m   JOHN   1.56
```

```
Race Ht Offic.FS Delay
-----
100H  JOHN   1.84
100H  JOHN   1.60
100H  JOHN   2.23
400m  PETER   2.09
400m  PETER   3.55
400m  PETER   1.30
```

3.3.9 Pr(inter). on/off

- These are the printer preferences. When selecting this menu, you enter the following display window:
- This means that standard the printer will start printing the start results immediately after each start.
- In case you do not want the printer to do that, in other words to shut the printer down, press the lower scroll arrow to switch to 'Printer OFF'. Then press 'ENTER' to save your settings.

```
Printer PREFERENCES

Printer ON
```

3.3.10 Sound preferences

Here we choose our start methods. When selecting this menu, you enter subsequent display window:

```
Please >Traditional
Select Pistol Start
Start Modern Start
Method
```

- When selecting '**Traditional**', the starter will give the start in a traditional way, meaning with one pistol for the starting shot and another pistol to stop the race (of course, only in case of a false start).
- When selecting '**Pistol Start**', the starter uses one starting pistol and in case of a false start, a number of alarm beeps will be heard through the starting modules.
- When selecting '**Modern Start**', the starting shot is given by means of a push button transmitting a beep signal through all loudspeakers. In case of a false start, the race is stopped by a number of beeps through all loudspeakers.

3.3.11 Displ(ay) light

In this menu, you can toggle between switching on and off the backlighting in your display window.

```
Display PREFERENCES
Backlight=ON
```

```
Display PREFERENCES
Backlight=OFF
```

When operating outdoors, you should only switch the light on during night of evening races, but for indoor events this may be helpful always. Just toggle by means of the scroll arrows on the front panel.

3.3.12 Meas(uring). Pref(erences)

When selecting this menu, you enter the following display window:

```
Measur. PREFERENCES
Min. React. Time=100
```

In here, the standard IAAF settings relating to the fastest possible reaction time of a human being is entered. Currently, this reaction time is set to 100 thousandths of a second. If the IAAF decides to change this number, you can easily increase or decrease this number by pressing the up or down arrows on the front panel of the FalseStart box. (Upper arrow to add, lower arrow to subtract.)



When pressing the 'ENTER' button, a 'Sensitivity' setting is displayed on the display window:

```
Measur. PREFERENCES
Min. React. Time=100
Sensitivity=070
```

This 'Sensitivity' is related to the sensitivity of the starting modules' sensors. In fact, the sensitivity number is closely related to the explosivity of the athletes in question.

The higher the power/explosivity of the athletes, the higher you should set the sensitivity number, => this will decrease the sensitivity of the FalseStart system !

Example:

Top athletes → sensitivity number set to 100
Juvenile athletes → sensitivity number set to 40

ADVICE:

- For top athletes, we recommend to decrease the sensitivity of the starting modules since these top athletes can already rock the modules (they simply exert more power on the blocks!) when getting ready to start. During this period their muscles can "vibrate", because of the high force applied. This should NOT give problems, if you do not increase the sensitivity of the system too much.
- Again add or subtract this number by means of the scroll arrows.
- Press the 'ENTER' button to save the settings.

3.3.13 Prog(ram) names

- In this menu you can change or enter the name(s) of the starter(s).
- By means of the up & down arrows you can scroll through the alphabet in climbing or descending order. To fix the chosen character, press the 'ENTER' button. Automatically, the blinking block will move to the right, to the following character. Decimal points, blanks, marks, numbers, etc. can be found before character 'A'.

PROGRAM STARTER NAME
up & down to modify,
enter for next char.
Starter nr:1=FFIC.1

blinking block with which to change
characters in alphabetical order

PROGRAM STARTER NAME
up & down to modify,
enter for next char.
Starter nr:1=JOHN.1


3.3.14 Total reset

In this menu you can **reset your entire system**. The message on the display speaks for itself:

Press 'Ready' key
for TOTAL RESET !
Press 'Enter' key
for cancel !

3.4 The start

- Before each race, always press the 'READY' button!
- You are now in the 'Status Screen' in which you can verify vital information (Have I selected the correct race? Is my battery voltage still sufficient? Is my starting pistol connected well? Is the MacFinish operator ready? Is the FalseStart system put into 'ready' position?).
- If everything is OK, the starter can start the race.
- After the start of the race, immediately the starter can see the fastest 3 reaction times (plus indication of lane and signal) on the display unit. If the starter selected the printer to print the start results automatically after each starting shot, first the print-out will be printed and then the results will appear on the display unit.
- In case of a FalseStart (an athlete reacted too soon after the starting shot or an athlete reacted even before the starting shot), the starter will hear 7 alarm beeps through his headphone.

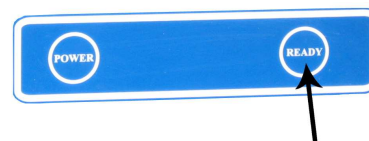

Lane	Signal	Time
2	FALSE	220 0,089
5	FALSE	244 0,096
7	OK	210 0,183

3.5 The print-out

Both starter delay times and reaction times can be printed out on paper via the built-in printer.

In 3.3.8 we have seen how a print-out of starter delay times can look like.


Now, how would a print-out of the reaction times look like? Let us comment on an example:

Race name : 100H				Starter delay time.
Heat number : 3				
Starter name : JOHN				Reaction times. A '-' appears in front of the time in case the athlete reacted before the starting shot.
Ready -> Start: 1,84 sec				
IAAF setting : 0,100 sec				This number appears in front of the lane covering athlete with fastest reaction time.
Lane	Signal	Time		
10		000		
9		004		
8	OK	215	0,266	
1	7 FALSE	244	-0,023	
6	OK	200	0,199	
5	FALSE	236	0,099	
4	OK	190	0,156	
3	OK	239	0,202	
2	OK	244	0,197	
1	OK	256	0,234	
TimeTronics, div of IE				Number since total reset.
FalseStart II System				
Start number:18				





3.6 The printer

3.6.1 Replacing paper

- Sometimes you will have to replace the roll of paper inside the printer. The red led underneath 'Paper' will illuminate warning the operator of the lack of paper. To replace the paper roll, you must first open the printer. To do so, press both knobs on each side of the printer's panel and pull the panel out of the FalseStart box:
- Now you are looking at the internal structure of the printer. This structure needs to be pulled to the front until you see the empty roll of paper underneath:
- Now replace the empty roll by a new roll of paper but make sure that the roll is positioned like this:
- Now insert the paper in the crack like this:
- At the same time, press the 'FEED' button on the printer's front panel until the paper roll comes sticking out sufficiently. Next, again attach the front panel of the printer (again keep the knobs pressed) and make sure that the paper enters the open crack on the printer's panel.

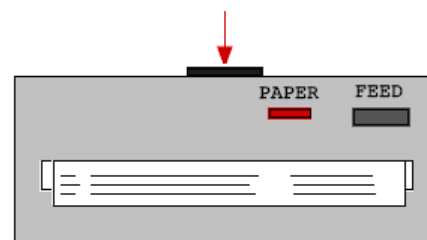

view from the side of the printer

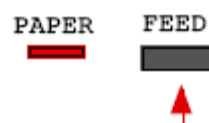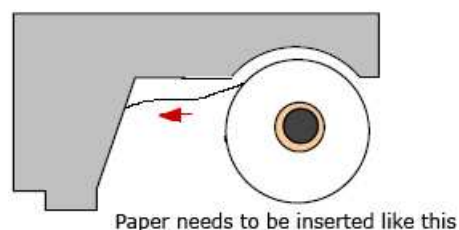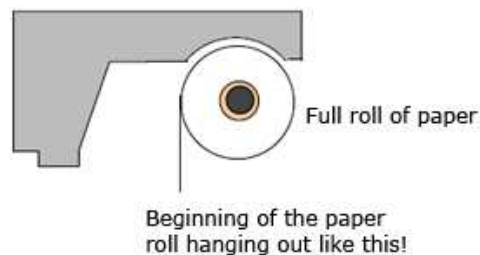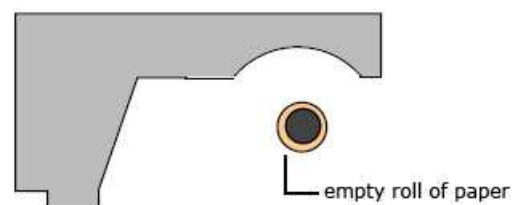

AUTOMATIC SHUTDOWN
in ... seconds.
Press any key to
cancel.

3.7 Automatic shutdown

If the starter does not use the system for more than ten minutes, the system will shut itself down automatically (to save battery power). The system will start an audible countdown, which can be interrupted by pushing whatever button on the front panel. On the display you will see the following:

Good Luck with your operation and use of this FalseStart system !

If you have whatever question or advise to us concerning this user manual.

Please contact us by email on info@timetronics.be

© Copyright 2012 TimeTronics. All rights reserved.

TimeTronics
Lammerdries 23b
B-2250 Olen
Belgium
Tel. : +32 (0) 14 23 19 11
Fax : +32 (0) 14 23 20 24